

Installation Sheet for IN485FGL001I0xx

The order code may vary depending on the product seller and the buyer's location.

Version: 1.0.2

Owner's record

Find the serial number on the silver label on the right side of the gateway. For sales or technical assistance, we recommend writing it in the space below:

SN:

Safety Information



Follow these instructions carefully. Improper work may seriously harm your health and damage the gateway and/or any other equipment connected to it.

Only technical personnel, following these instructions and the country legislation for installing electric equipment, can install and manipulate this gateway.

Install this gateway indoors, in a restricted access location, avoiding exposure to direct solar radiation, water, high relative humidity, or dust.

All wires for communication and power supply (if needed) must only be connected to networks without routing to the outside plant. All communication ports are considered for indoor use and must only be connected to SELV circuits.

Disconnect power wires before manipulating and connecting them to the gateway.

Use SELV-rated NEC class 2 or limited power source (LPS) power supply.

Supply the correct voltage to power the gateway. See the Technical Specifications table at the end of this document.

Respect the expected polarity of power (if needed) and communication cables when connecting them to the gateway.

Mounting




Do not mount the gateway in air-handling units or conducts.



DIN rail mounting inside a grounded metallic cabinet is recommended.

Wall mounting


1. Press the rear panel clips until you hear a *click*.
2. Use the clip holes to screw the gateway to the wall.
3. Make sure the gateway is firmly fixed.

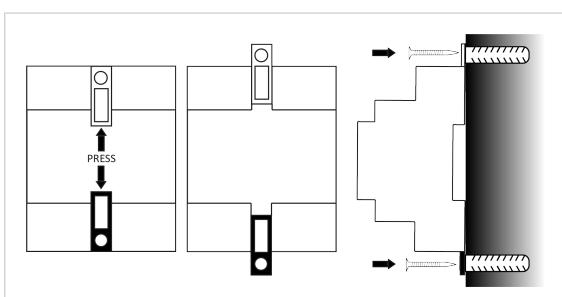

DIN rail mounting

Keep the top side clip in its original position.

1. Insert the gateway in the upper edge of the DIN rail.
2. Fit the low side of the gateway in the DIN rail.
3. Push the bottom clip back to its original position, locking the gateway to the rail.
4. Make sure the gateway is firmly fixed.

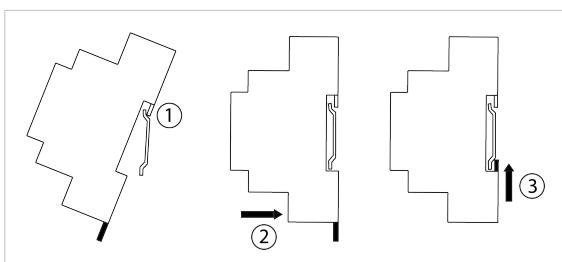

Wiring

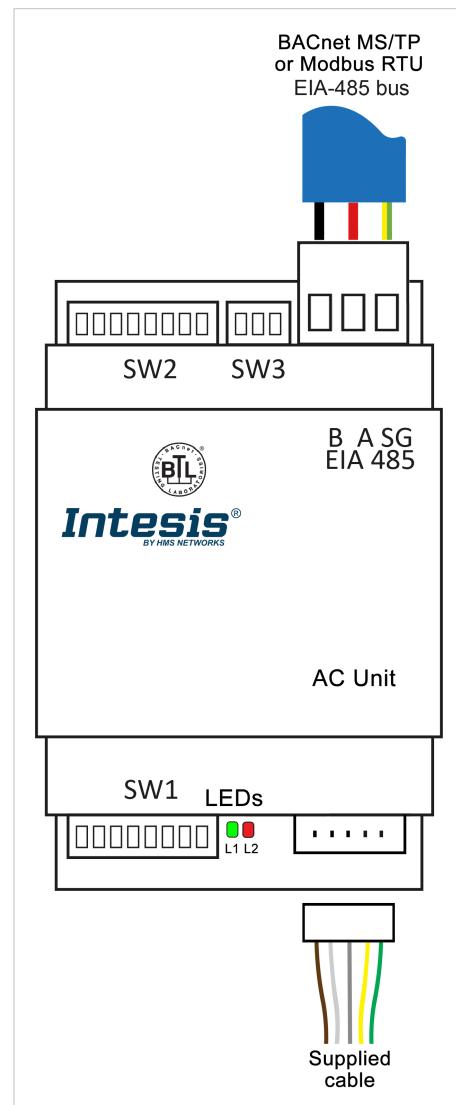


Figure 1. Wiring diagram (wire colors are indicative only)

1. Disconnect the AC system from the power.
2. Mount the gateway in the desired place.
3. Use the supplied cable to connect the AC unit and the gateway:



This cable is 1.50 m (4.9 feet) long. Its modification in length may affect the correct operation of the gateway.

- a. **AC unit connection:** Plug the largest unsheathed cable part connector into the socket CN65, CN6, or CN12 of the AC unit control board.
- b. **Gateway connection:** Plug the other end connector, the one on the shortest unsheathed part of the cable, into the socket labeled as **AC Unit**.

4. Connect the BACnet MS/TP or Modbus RTU bus to the EIA-485 port of the gateway.



Observe polarity: B -, A +, and SG for ground connection.



Keep communication cables away from power and ground wires.

DIP Switches

Table 1. **SW1** (P1, P4): AC unit configuration; (P5): Gateway configuration; (P6 to P8): BACnet MS/TP or Modbus RTU baudrate

Binary value	Position								Description	
	1	2	3	4	5	6	7	8		
b0 .. b7	1	2	3	4	5	6	7	8	BACnet	Modbus
00XXXXXX	↓	↓	X	X	X	X	X	X	-	3 Fan speeds
10XXXXXX	↑	↓	X	X	X	X	X	X	-	4 Fan speeds (default)
01XXXXXX	↓	↑	X	X	X	X	X	X	-	5 Fan speeds
11XXXXXX	↑	↑	X	X	X	X	X	X	-	6 Fan speeds
XXXX0XXX	X	X	X	X	↓	X	X	X	BACnet MS/TP in 485 port enabled (default)	Modbus RTU in 485 port disabled (default)
XXXX1XXX	X	X	X	X	↑	X	X	X	BACnet MS/TP in 485 port disabled	Modbus RTU in 485 port enabled
XXXXX000	X	X	X	X	X	↓	↓	↓	Autobaudrate (default)	2400 bps
XXXXX100	X	X	X	X	X	↑	↓	↓	9600 bps	4800 bps
XXXXX010	X	X	X	X	X	↓	↑	↓	19200 bps	9600 bps
XXXXX110	X	X	X	X	X	↑	↑	↓	38400 bps	19200 bps
XXXXX001	X	X	X	X	X	↓	↓	↑	57600 bps	38400 bps
XXXXX101	X	X	X	X	X	↑	↓	↑	76800 bps	57600 bps
XXXXX011	X	X	X	X	X	↓	↑	↑	115200 bps	76800 bps
XXXXX111	X	X	X	X	X	↑	↑	↑	Autobaudrate	115200 bps

Table 2. **SW2 (BACnet MS/TP)** (P1 to P7): BACnet MS/TP MAC address; (P8): Temperature unit (°C/°F)

Binary value	Position								BACnet address	Description
	1	2	3	4	5	6	7	8		
b0 .. b7	1	2	3	4	5	6	7	8		
0000000X	↓	↓	↓	↓	↓	↓	↓	X	0	-
1000000X	↑	↓	↓	↓	↓	↓	↓	X	1	-
0100000X	↓	↑	↓	↓	↓	↓	↓	X	2	-
1100000X	↑	↑	↓	↓	↓	↓	↓	X	3	-
...									...	-
1011111X	↑	↓	↑	↑	↑	↑	↑	X	125	-
0111111X	↓	↑	↑	↑	↑	↑	↑	X	126	-
1111111X	↑	↑	↑	↑	↑	↑	↑	X	127	-
XXXXXX0	X	X	X	X	X	X	X	↓	-	Temperature in Celsius (default)
XXXXXX1	X	X	X	X	X	X	X	↑	-	Temperature in Fahrenheit

Table 3. **SW2 (Modbus RTU)** (P1 to P6): Modbus server address; (P7): Degree decimals setting (P8): Temperature unit (°C/°F)

Binary value	Position								Modbus address	Description
	1	2	3	4	5	6	7	8		
b0 .. b7	1	2	3	4	5	6	7	8		
100000XX	↑	↓	↓	↓	↓	X	X	X	1	-
010000XX	↓	↑	↓	↓	↓	X	X	X	2	-
110000XX	↑	↑	↓	↓	↓	↓	X	X	3	-
...									...	-
101111XX	↑	↓	↑	↑	↑	↑	X	X	61	-
011111XX	↓	↑	↑	↑	↑	↑	X	X	62	-
111111XX	↑	↑	↑	↑	↑	↑	X	X	63	-
XXXXXX0	X	X	X	X	X	X	↓	X	-	Temperature in degrees x1 (default)
XXXXXX1X	X	X	X	X	X	X	↑	X	-	Temperature in degrees x10. Example: 19.2°=192
XXXXXX0	X	X	X	X	X	X	X	↓	-	Temperature in Celsius (default)
XXXXXX1	X	X	X	X	X	X	X	↑	-	Temperature in Fahrenheit

Table 4. **SW3** (P1 to P3): BACnet/Modbus polarization and termination resistor

Binary value	Position			Description			
b0 .. b2	1	2	3				
0XX	↓	X	X	EIA-485 bus without termination resistor. The gateway is not at one end of the EIA-485 bus (default value)			
1XX	↑	X	X	120 Ω termination resistor active. The gateway is at one end of the EIA-485 bus			
X00	X	↓	↓	No bus polarization (default value)			
X11	X	↑	↑	Bus polarization active			



The DIP switches configuration will only take effect after rebooting the gateway.

LEDs Information

LED	Status	Description
When the gateway is set for BACnet MS/TP		
L1 Green	ON	EIA-485 bus link performed
	Flickering	Activity on the EIA-485 bus
	OFF	EIA-485 bus link not performed
L2 Red	ON	AC communication error
	Blinking	AC unit error
	Flashing	AC communication OK
When the gateway is set for Modbus RTU		
L1 Green	Blinking	Communication error Any error in the AC unit
	Flashing	Normal operation
L1 Green + L2 Red	Pulse	Gateway startup
LED PATTERNS:		
Flickering: 90 % on / 10 % off		
Blinking: 50 % on / 50 % off		
Flashing: 10 % on / 90 % off		
Pulse: 5 sec on / then off		

Technical Specifications

Enclosure	Plastic, type PC (UL 94 V-0) Net dimensions (DxWxH): 93 x 53 x 58 mm / 3.7 x 2.1 x 2.3" Recommended space for installation (DxWxH): 100 x 60 x 70 mm / 4 x 2.4 x 2.8" Color: Light grey. RAL 7035
Weight	85 g (3 oz)
Terminal wiring for low-voltage signals	Per terminal: solid wires or stranded wires (twisted or with ferrule). Wire cross-section/gauge: 1 core: 0.5 to 2.5 mm ² (20 to 14 AWG) 2 cores: 0.5 to 1.5 mm ² (20 to 16 AWG) 3 cores: not permitted
Mounting	Wall or DIN rail
BACnet MS/TP - Modbus RTU port	1 x EIA-485 pluggable terminal block (3 poles: B, A, and SG) with 120 Ω resistor termination and polarisation configurable by DIP switch
AC unit port	1 x Specific socket
LED indicators	2 x Communication status
DIP switches	SW1: Gateway, AC unit, and baudrate configuration SW2: BACnet/Modbus address and temperature unit SW3: Bus polarization and termination
Operational and storage temperature	Celsius: Op: 0 to +70°C; St: -20 to 85°C Fahrenheit: 32 to 158°F; St: -4 to 185°F
Operational and storage humidity	5% to 95%, non-condensing
Isolation Voltage	1500 VDC
Isolation resistance	1000 MΩ

Disposal and Recycling



This product contains electronic components and must be properly disposed of according to local laws and regulations. For further information, refer to: <https://www.intesis.com/weee-regulation>

For further information on the installation, connection, and configuration of this gateway, refer to the [User manual](#).